


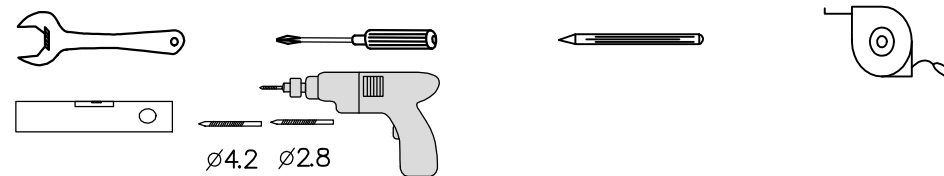
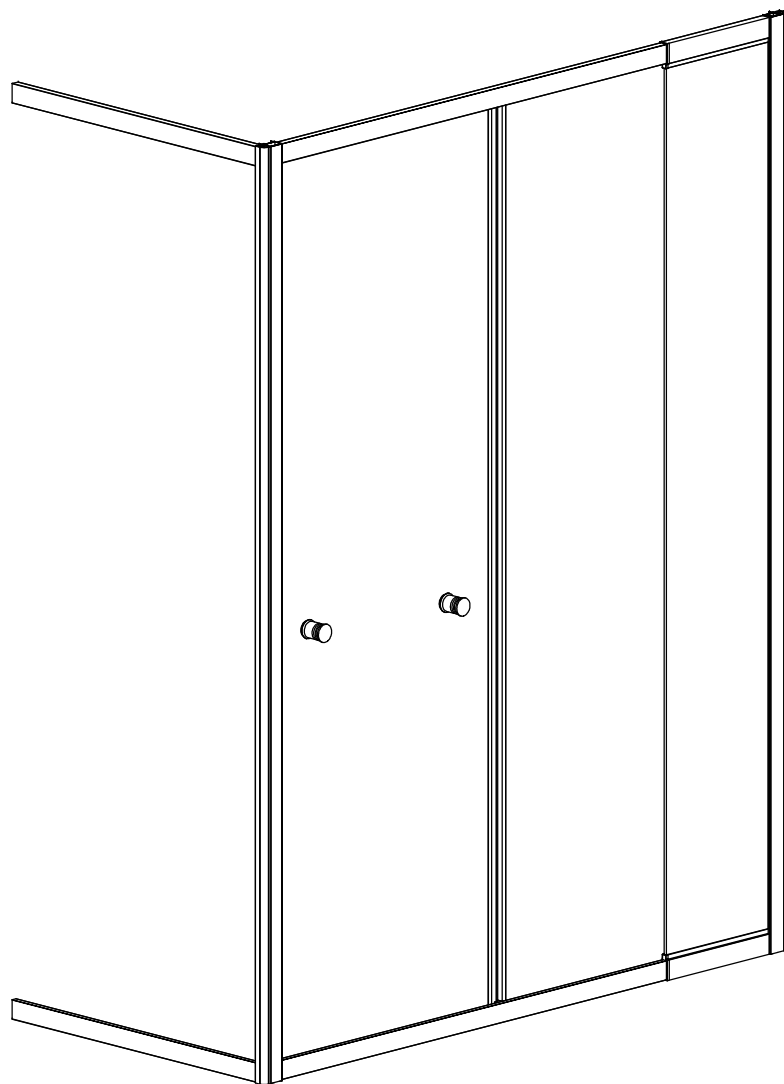







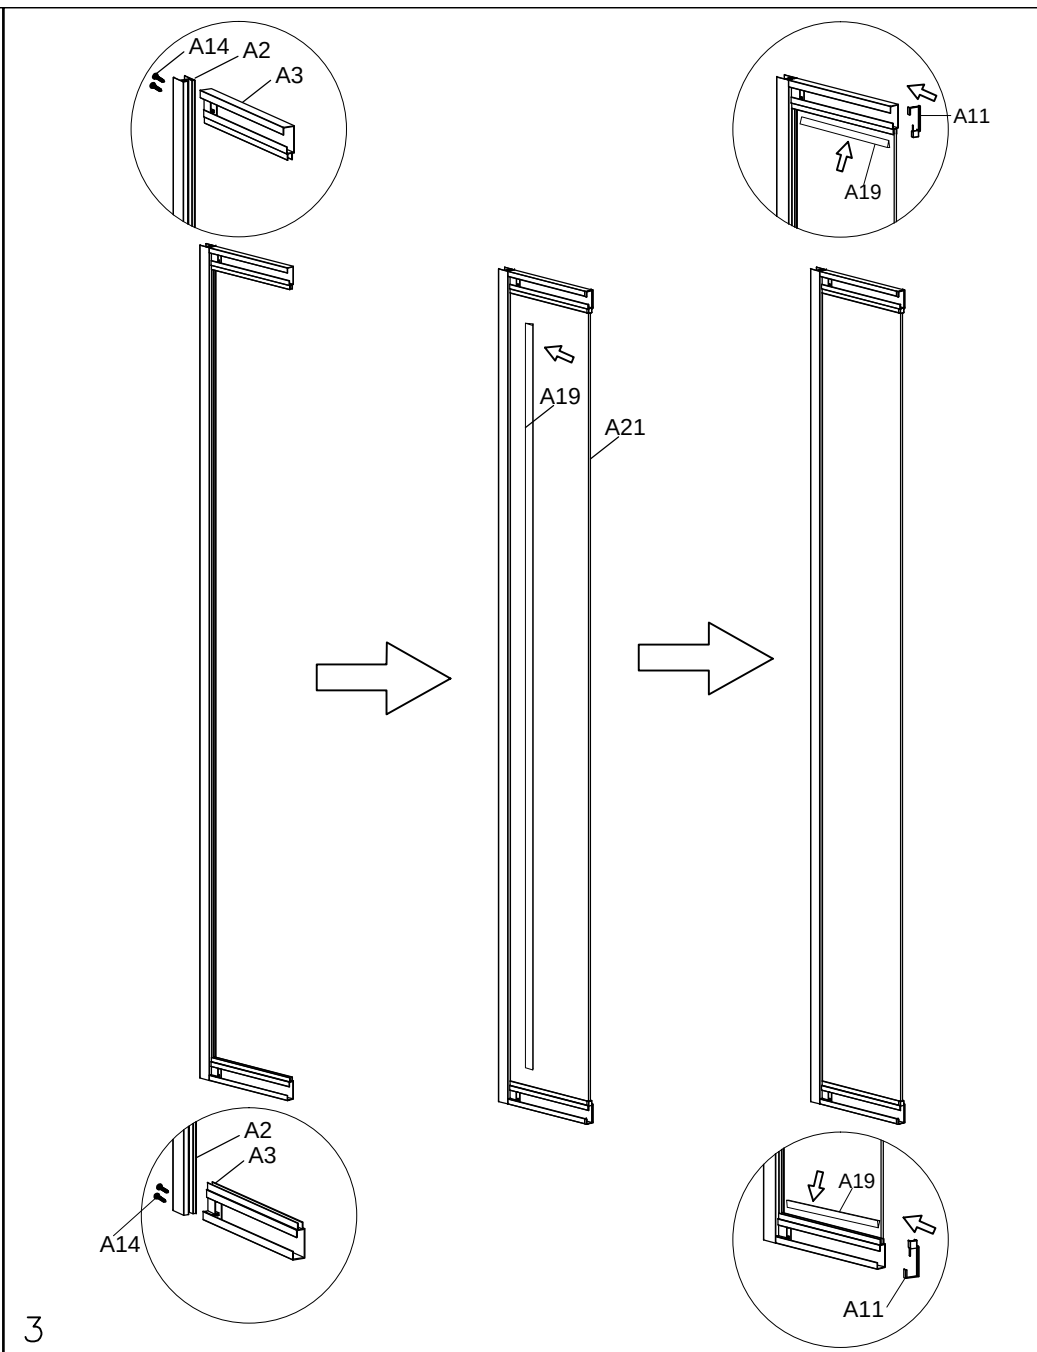




A VMG/A VGS/A VC/A VN


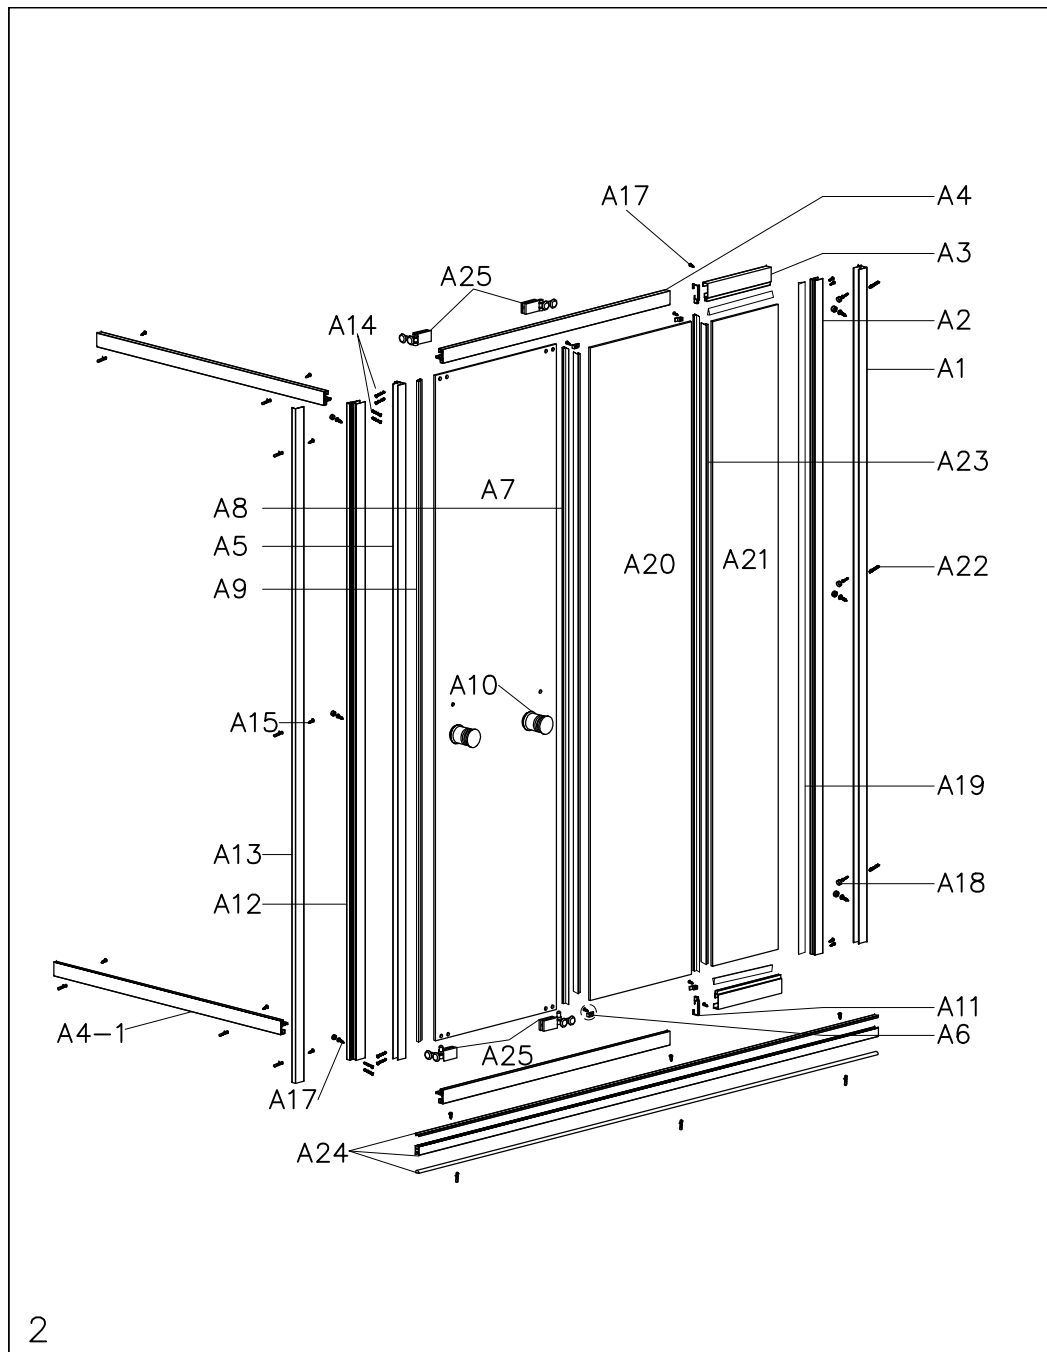




A1  X1	A2  X1	A3  X2	A4  X2	A4-1  X2	A5  X1
A6 ST4*9.5=4  X4	A7  X1	A8  X2	A9  X1	A10  X2	
A11  X2	A12  X1	A13  X1	A14 ST4*30=8  X12	A15 ST4*30=6  X14	
A16 ST4*6=2  X2	A17 ST4*10=6  X3	A18  X6	A19  X3	A20  X1	
A21  X1	A22  X14	A23  X2	A24  X1	A25  X4	

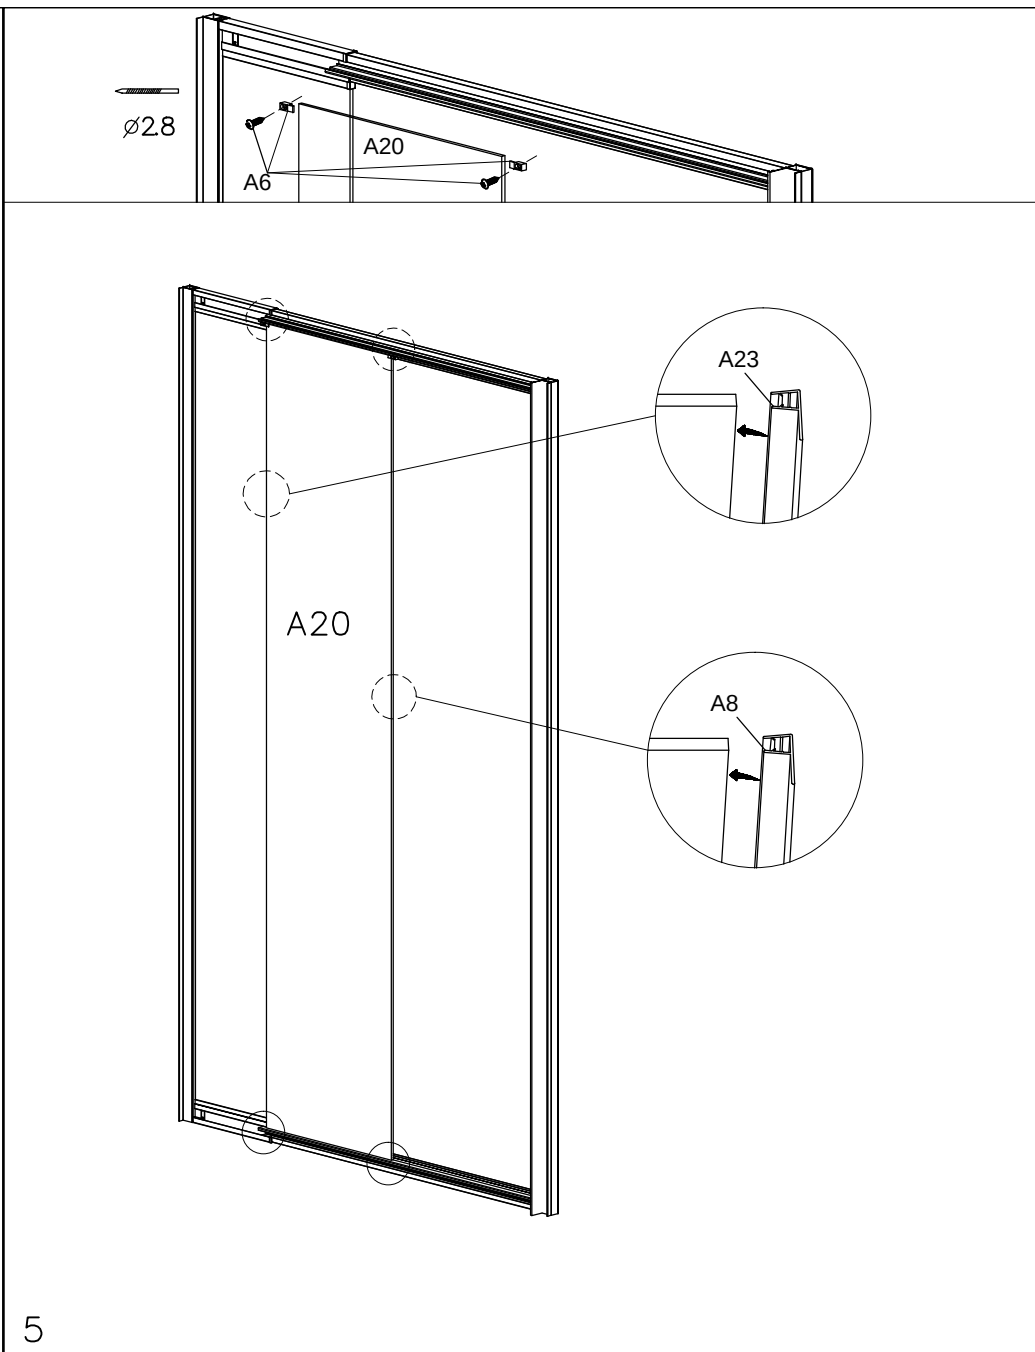

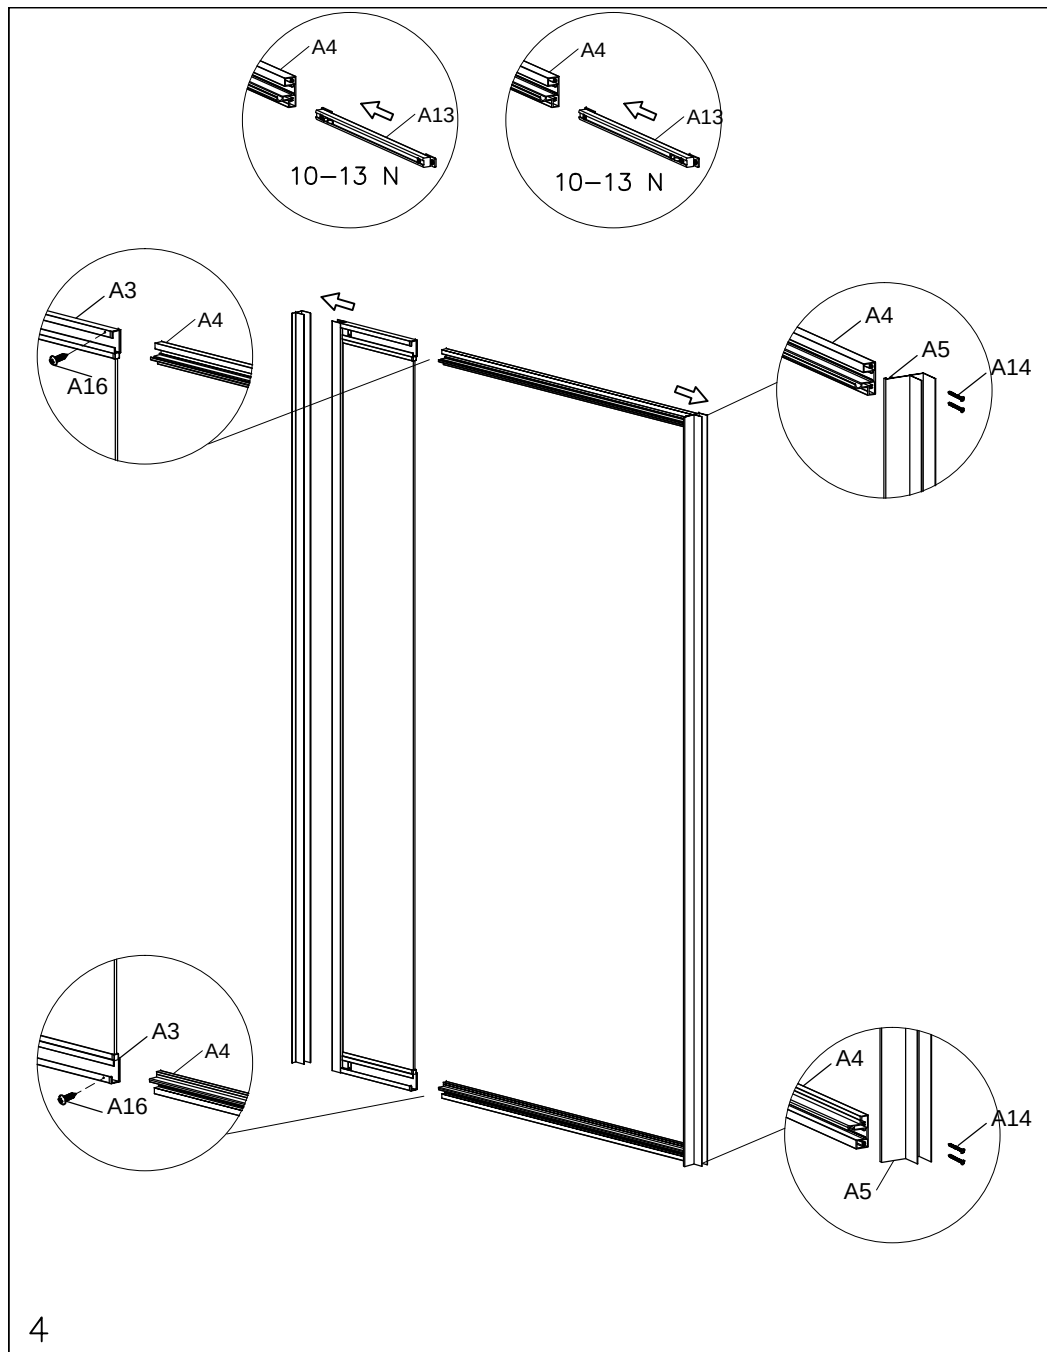




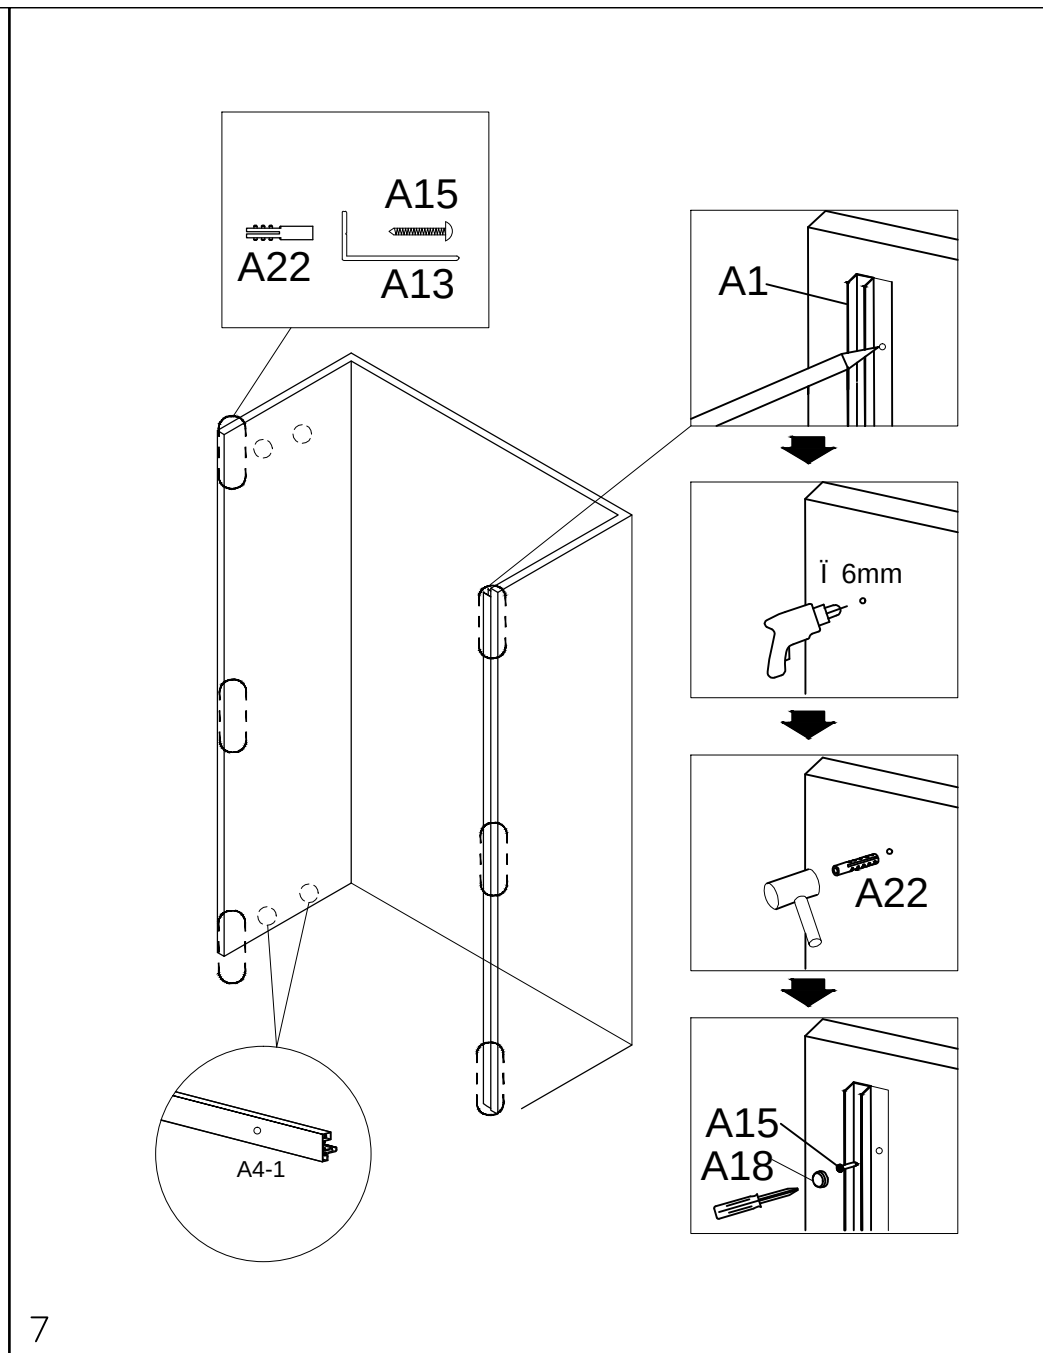
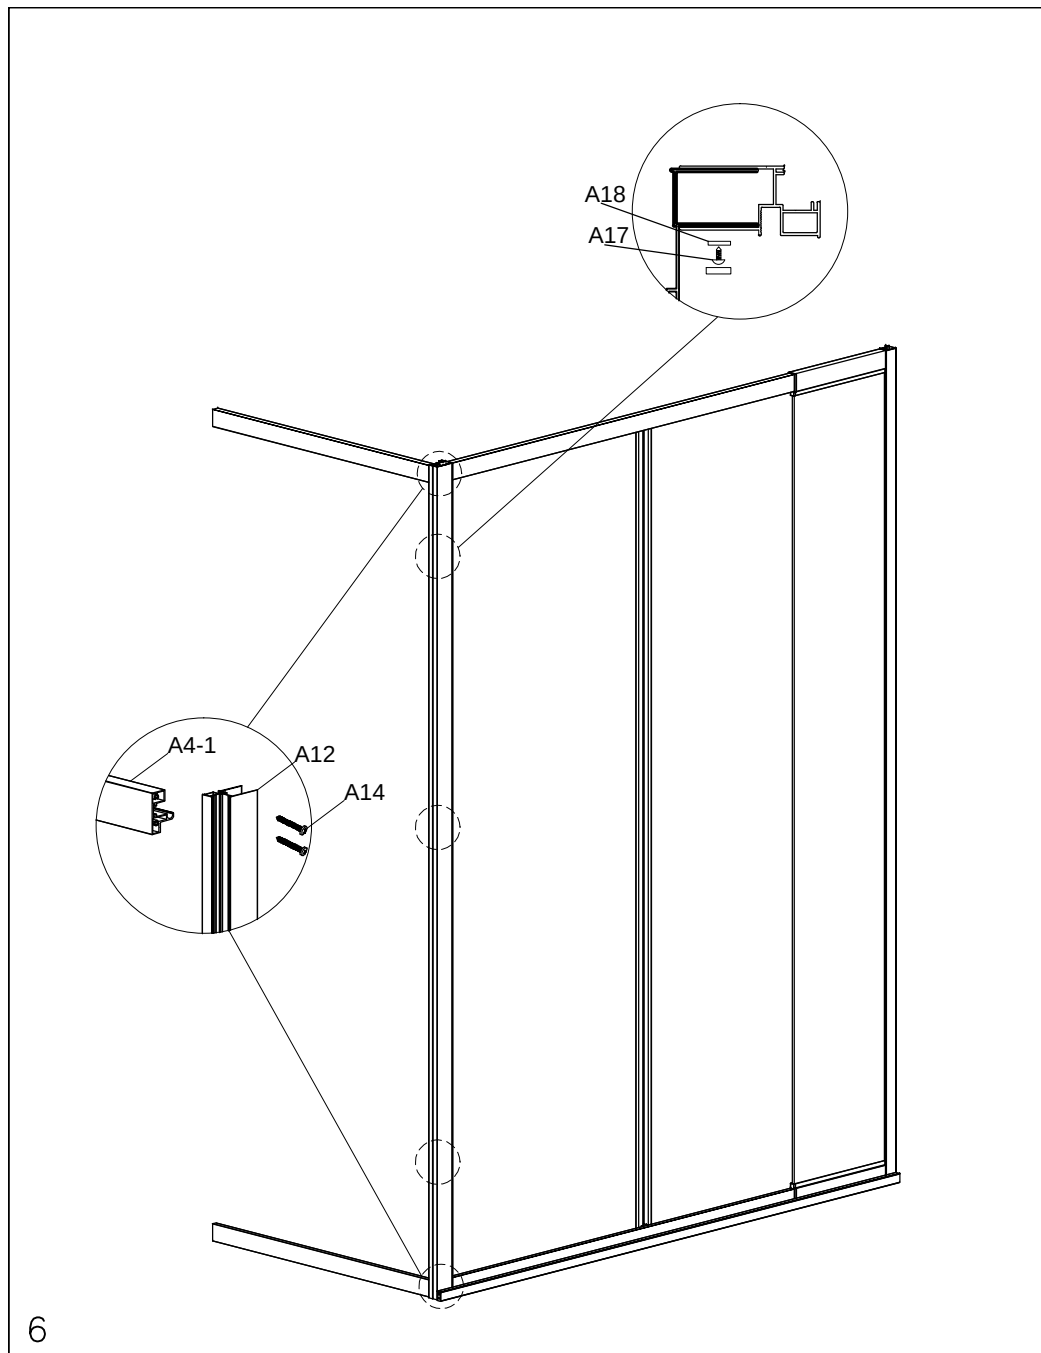


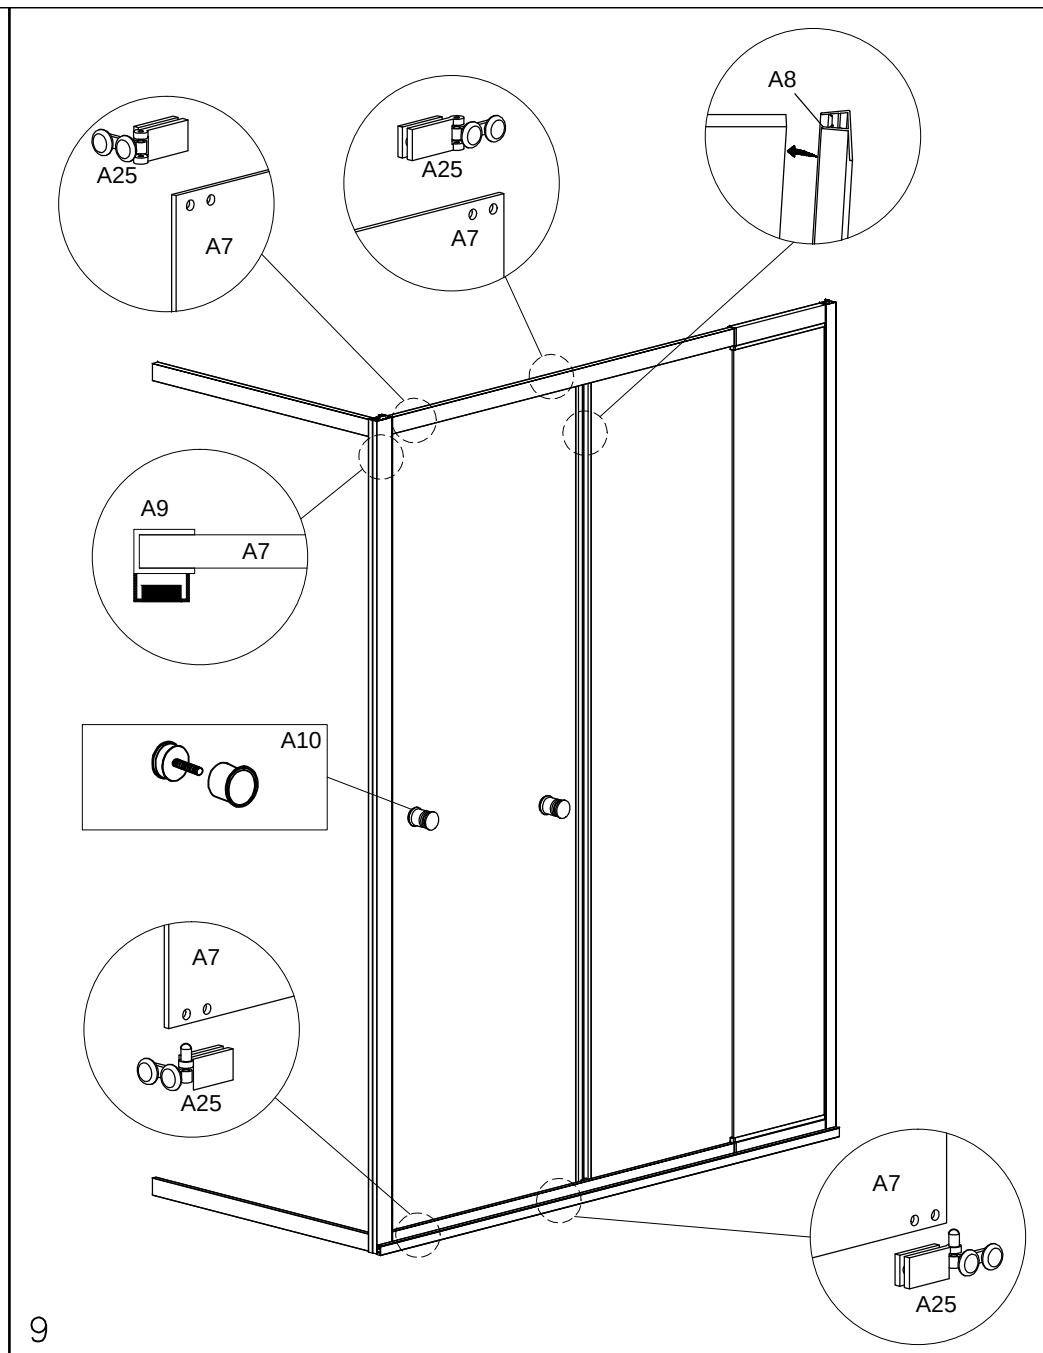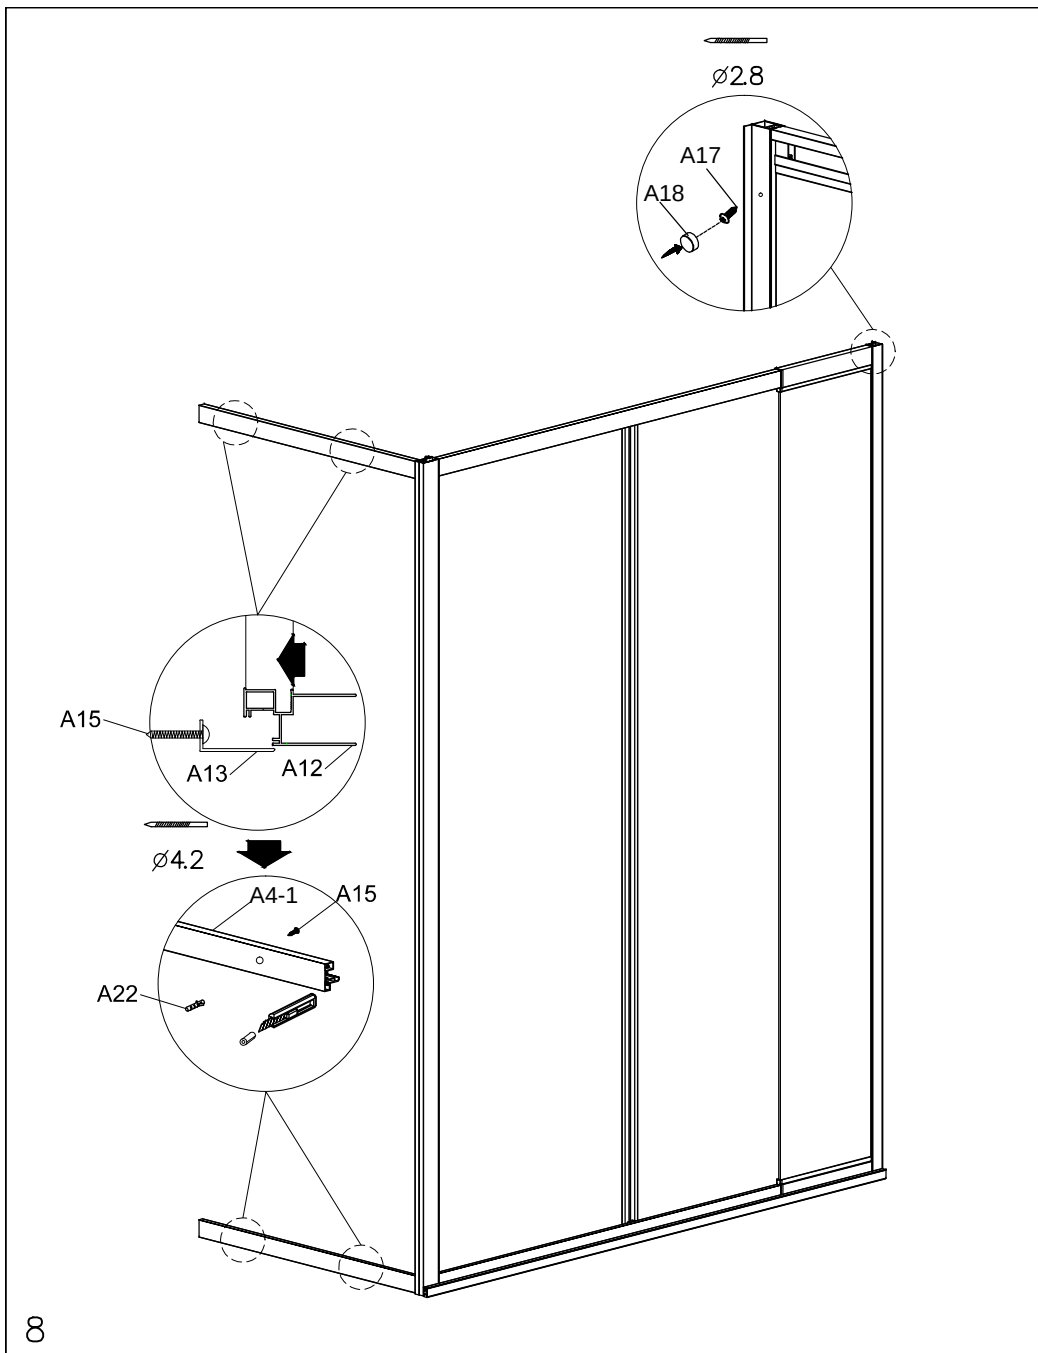

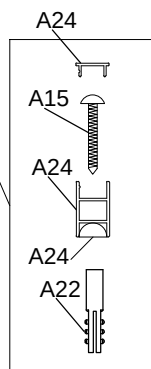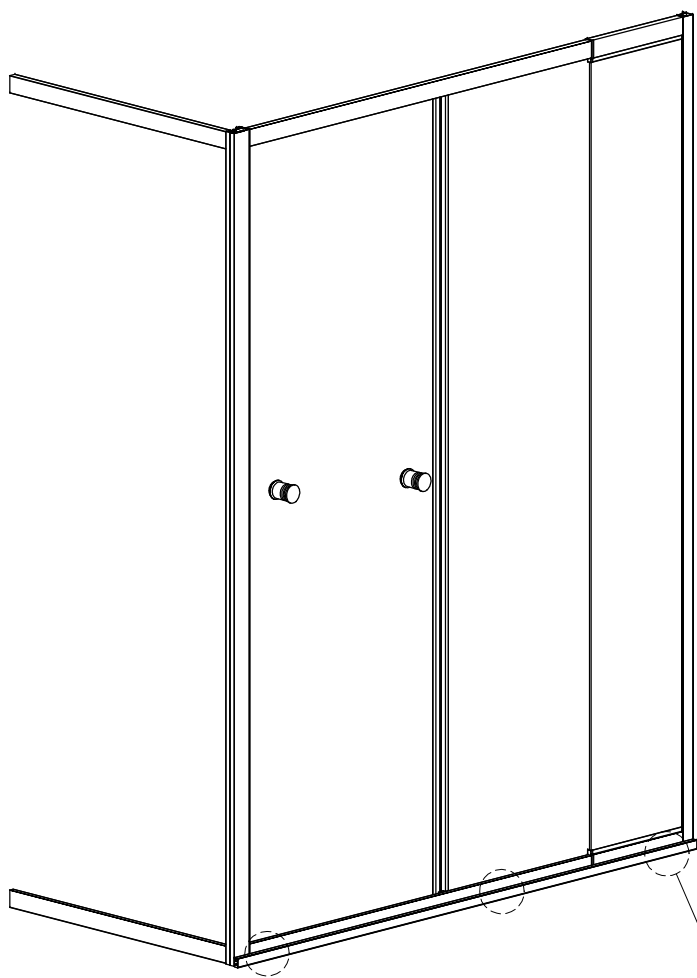









Ø4.2

A VMG/A VGS/A VC/A VN
+A MG/A GS/A C/A N

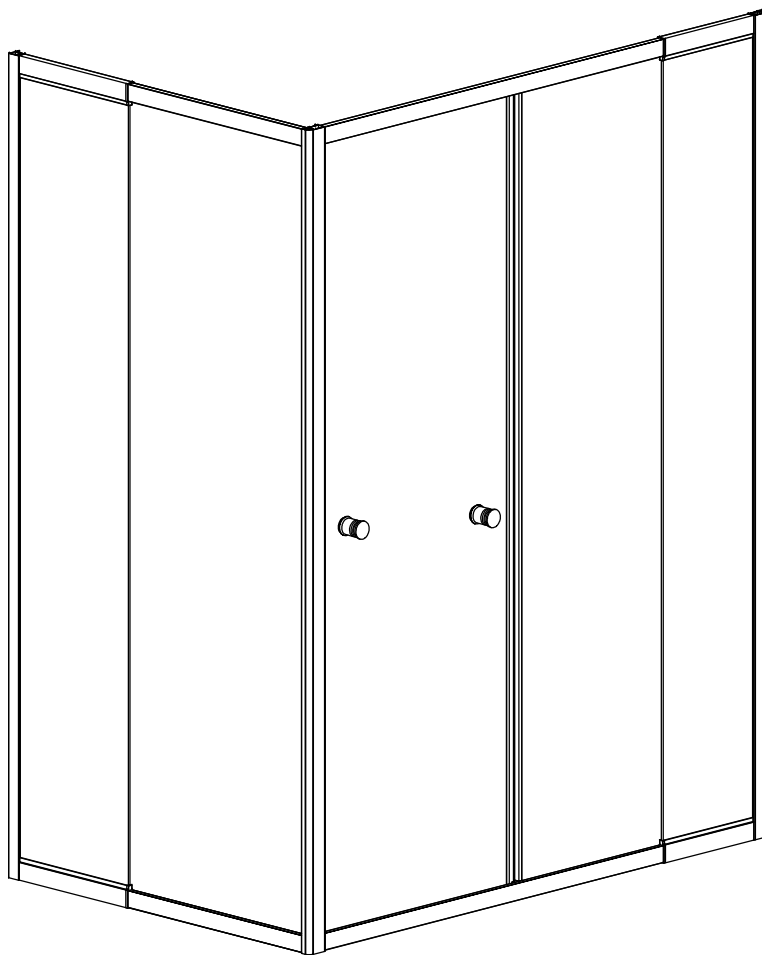


ø28



A1  X1	A2  X1	A3  X2	A4  X2	A5  X1
A6  X1	A7  X1	A8  X2	A9  X2	A10  X4
A11 ST4*30=8  X8	A12 ST4*6=2  X2	A13 ST4*10=3  X3	A14  X3	A15 ST4*10=2   X2
A16  X1	A17  X1	A18  X1	A19 ST4*30=4  X4	A20  X4






A







B





When assembling this model, replace side-door track A with sliding-door track B.

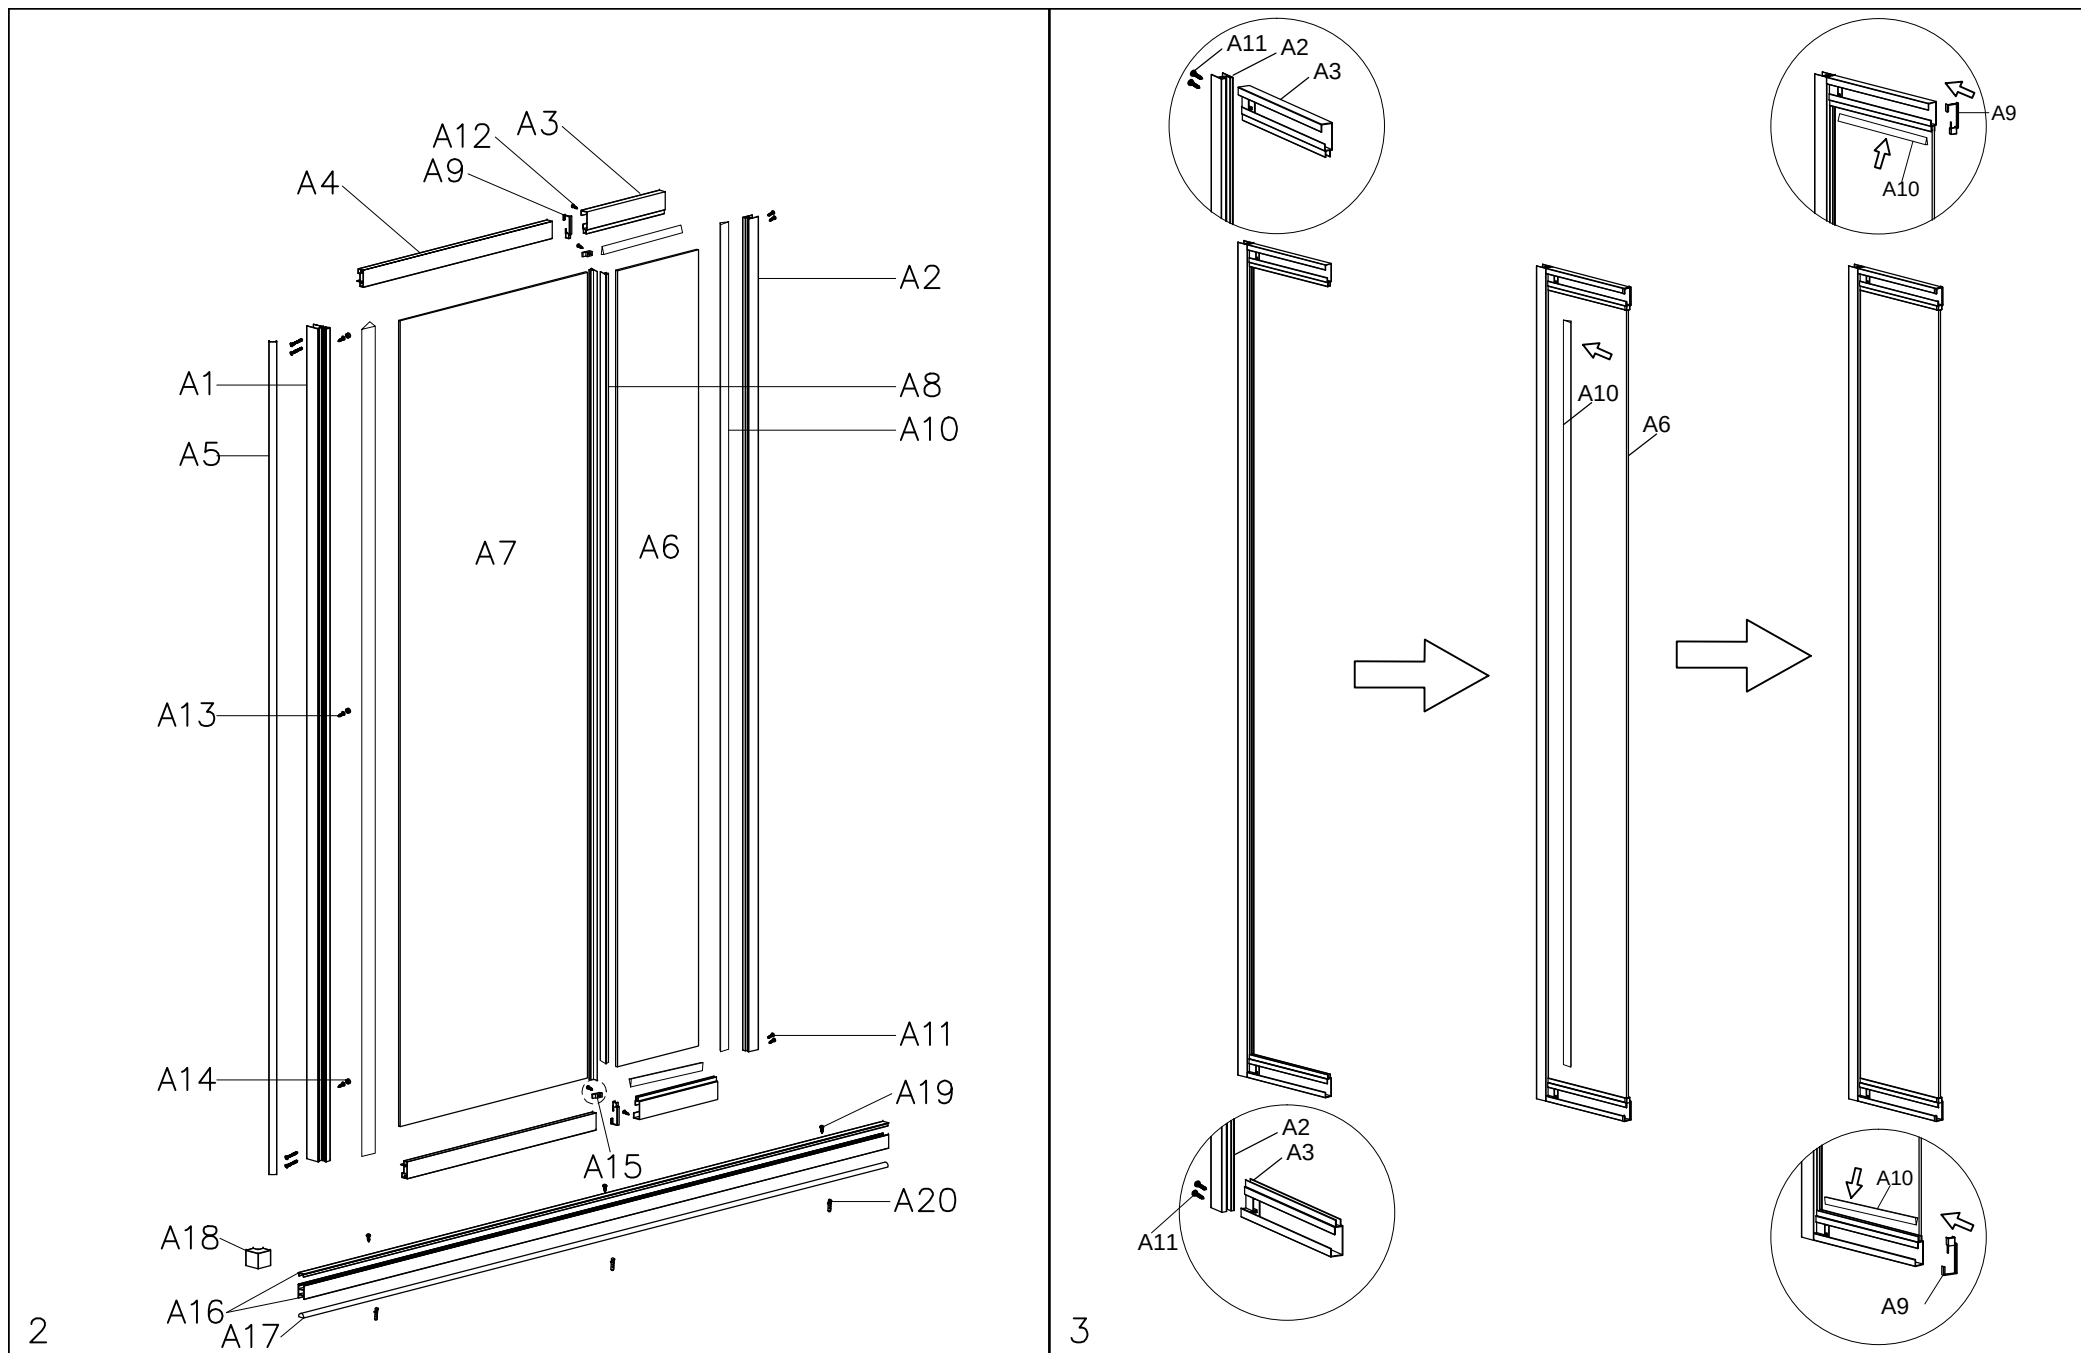

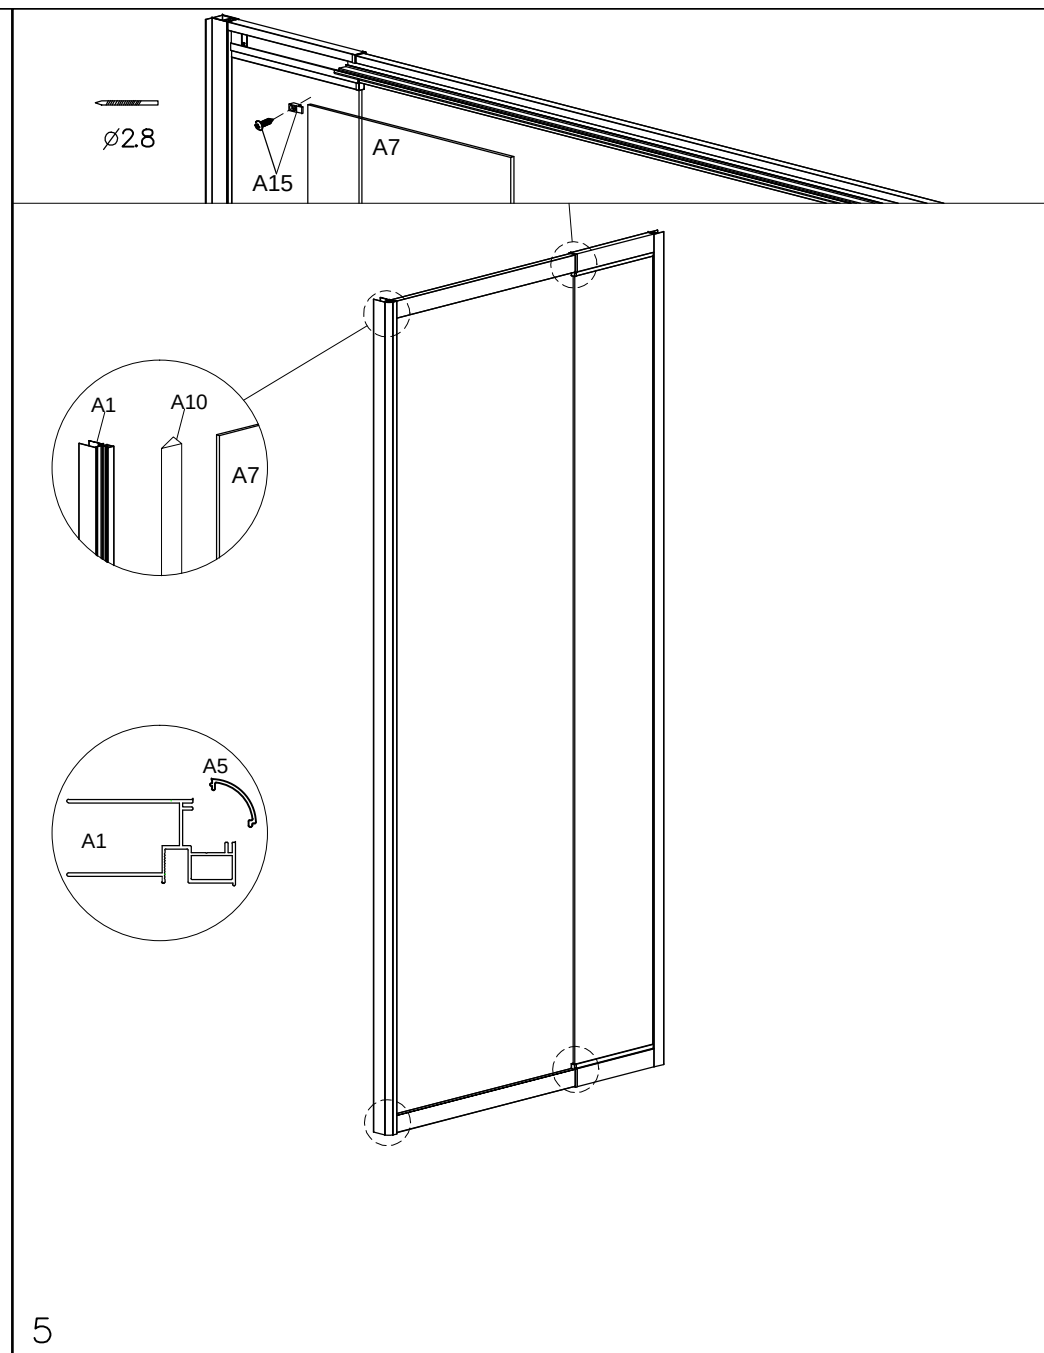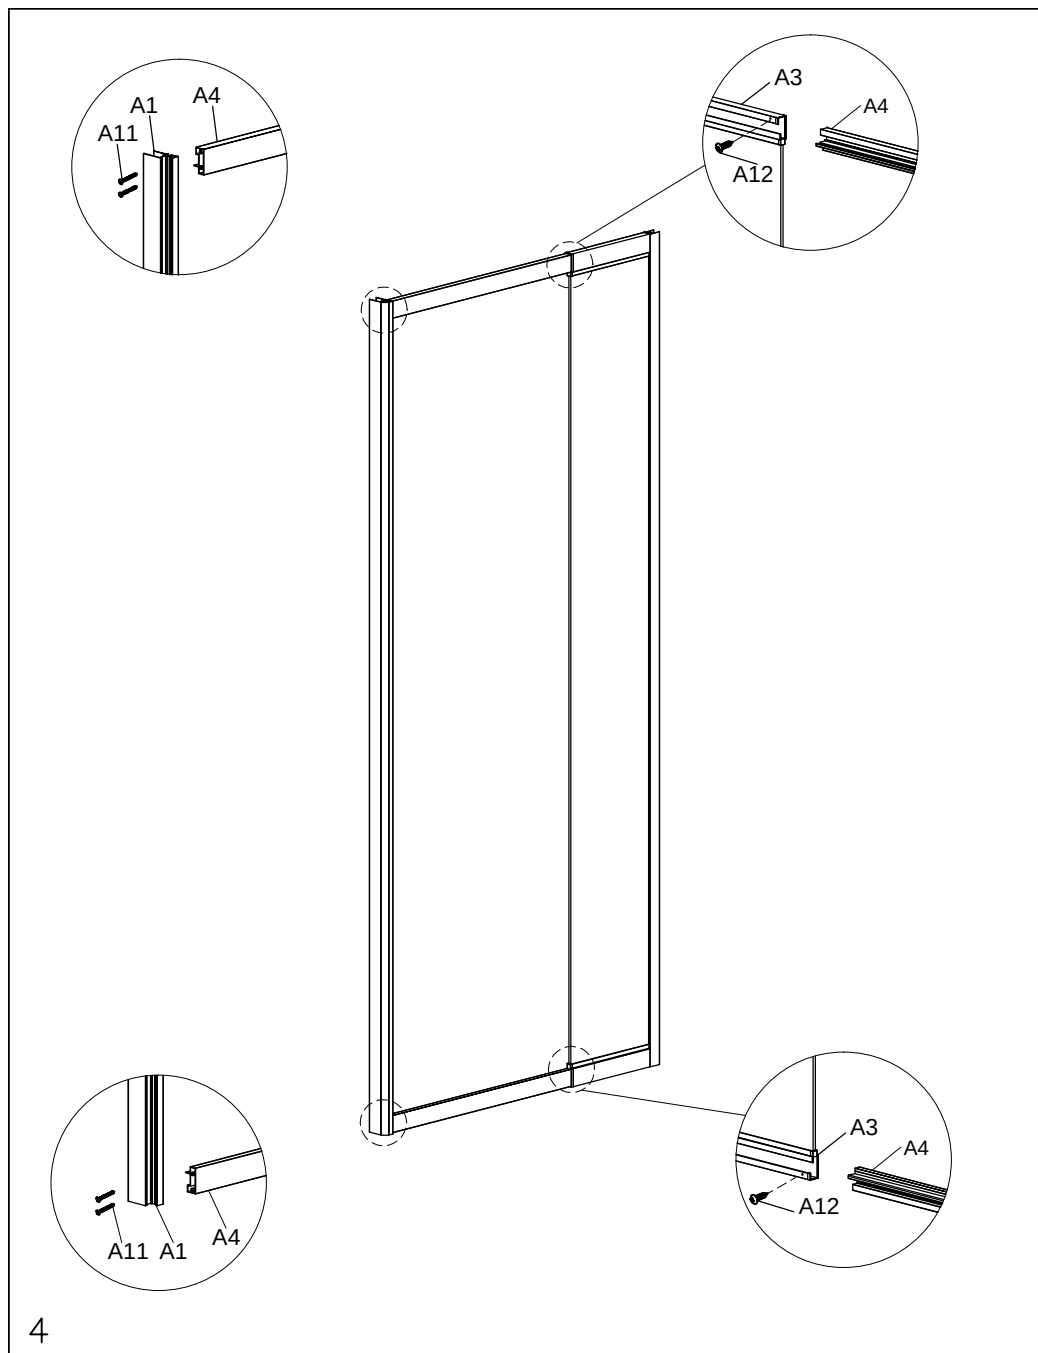




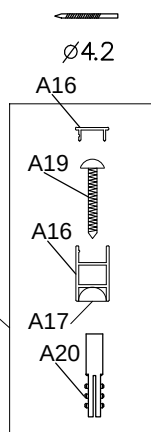
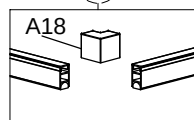
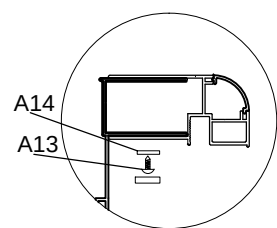
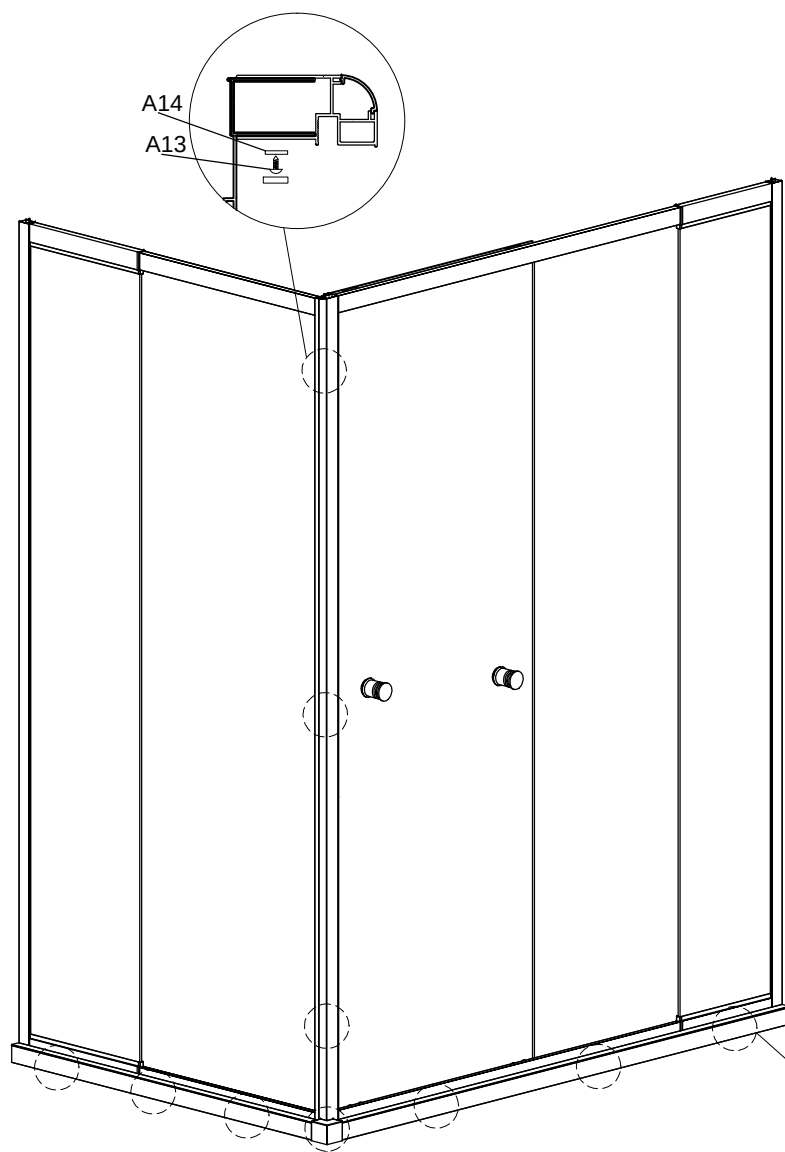



A VMG/A VGS/A VC/A VN
+A MG/A GS/A C/A N


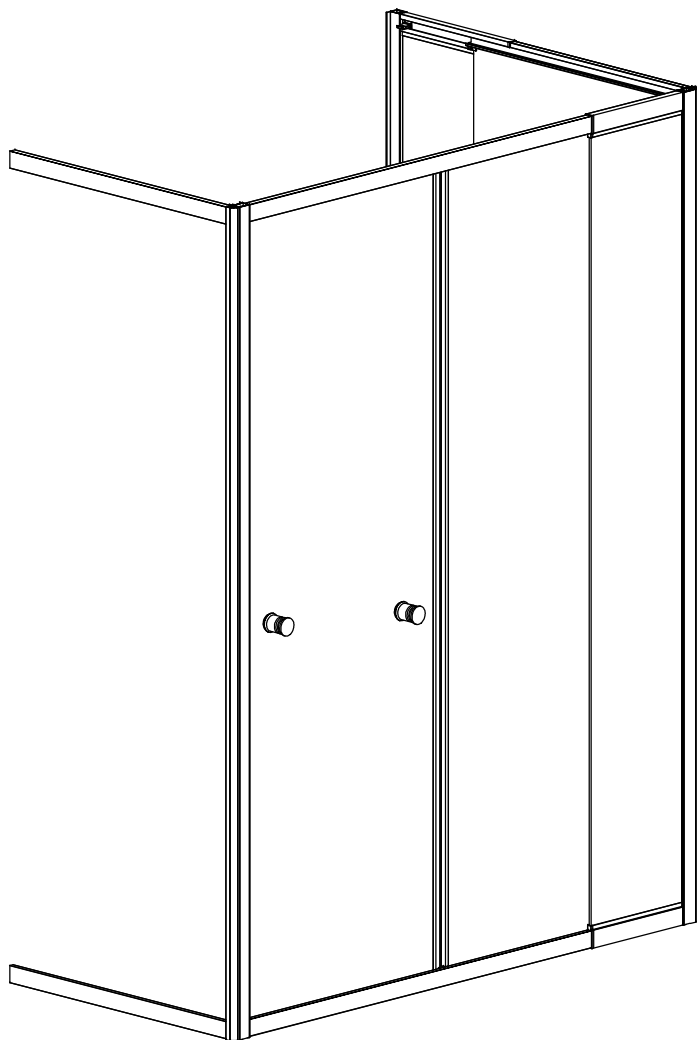


ø28




A1  X1	A2  X1	A3  X2	A4  X2	A5  X1
A6  X1	A7  X1	A8  X2	A9  X2	A10  X4
A11 ST4*30=8  X8	A12 ST4*6=2  X2	A13 ST4*10=3  X3	A14  X3	A15 ST4*10=2   X2
A16  X1	A17  X1	A18  X1	A19 ST4*30=4  X4	A20  X4

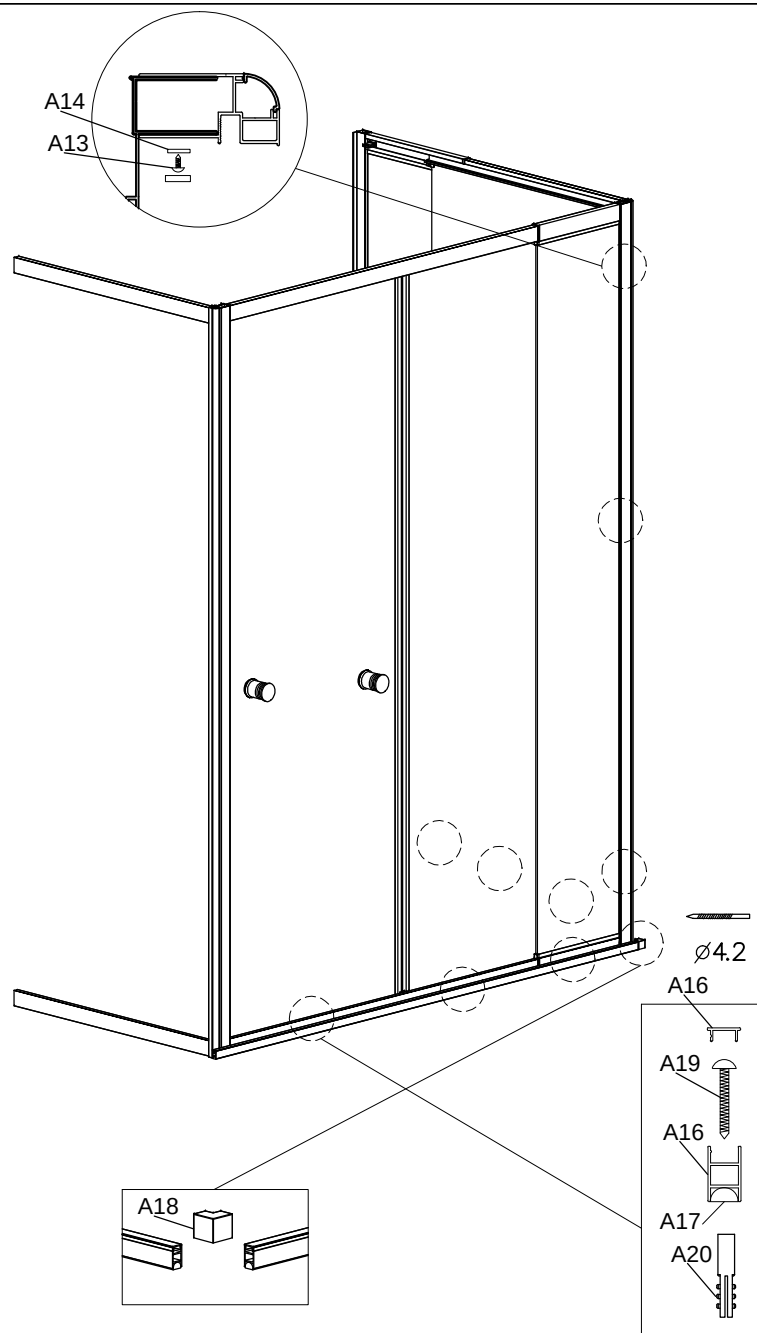

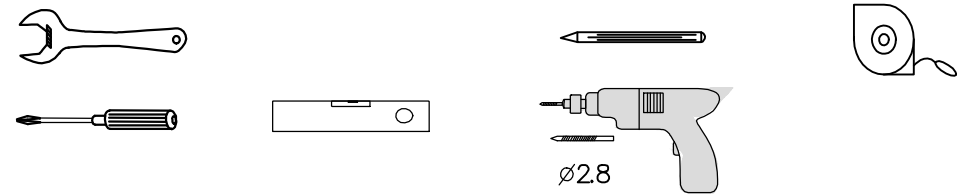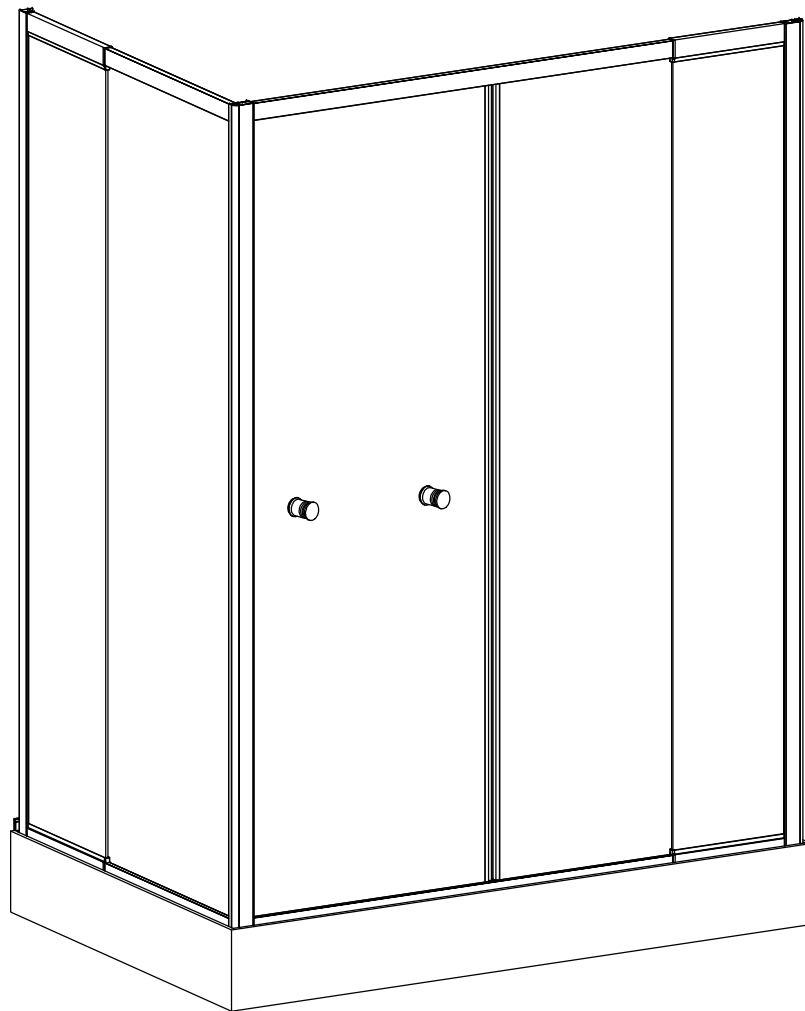

A1  X1	A2  X1	A3  X2	A4  X8	A5  X8
A6 ST4*40=8  X1	A7  X1			

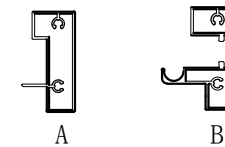

When assembling this model, replace side-door track A with sliding-door track B.

